


X1 - Thermo connector blueMaster pro

Part list	
Part	Item code
Housing 2 levers	152.267
Insert 24p M	308.0188.00
Coding pin	110.223

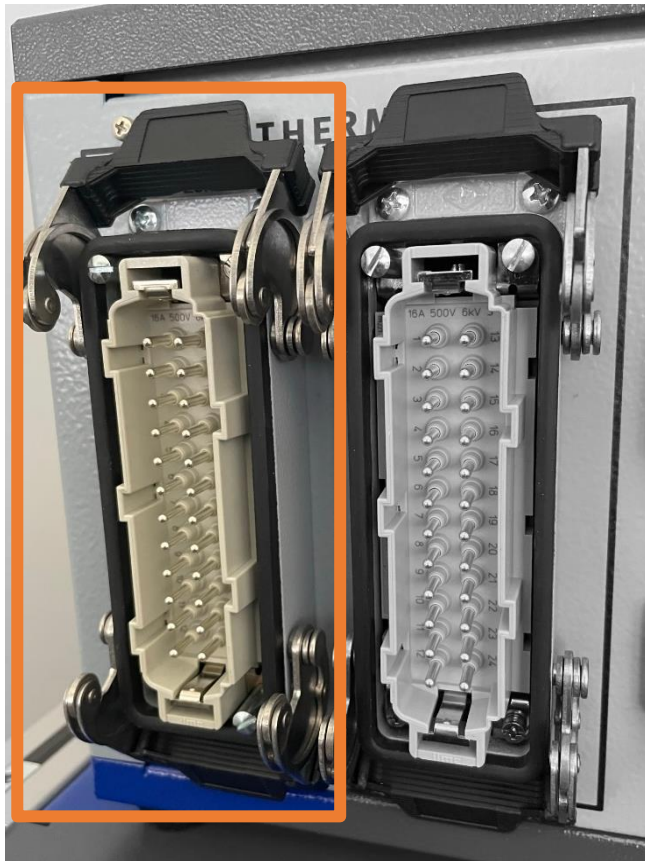


Wiring scheme		Pin	Designation	Zone
		1	+	1
		2	+	2
		3	+	3
		4	+	4
		5	+	5
		6	+	6
		7	+	7
		8	+	8
		9	+	9
		10	+	10
		11	+	11
		12	+	12
		13	-	1
		14	-	2
		15	-	3
		16	-	4
		17	-	5
		18	-	6
		19	-	7
		20	-	8
		21	-	9
		22	-	10
		23	-	11
		24	-	12
		PE		

On blueMaster pro 6 units, connector X1 is not fully assigned.

X2 - Thermo connector blueMaster pro

Part list	
Part	Item code
Housing 2 levers	152.267
Insert 24p M	308.0188.00
Coding pin	110.223

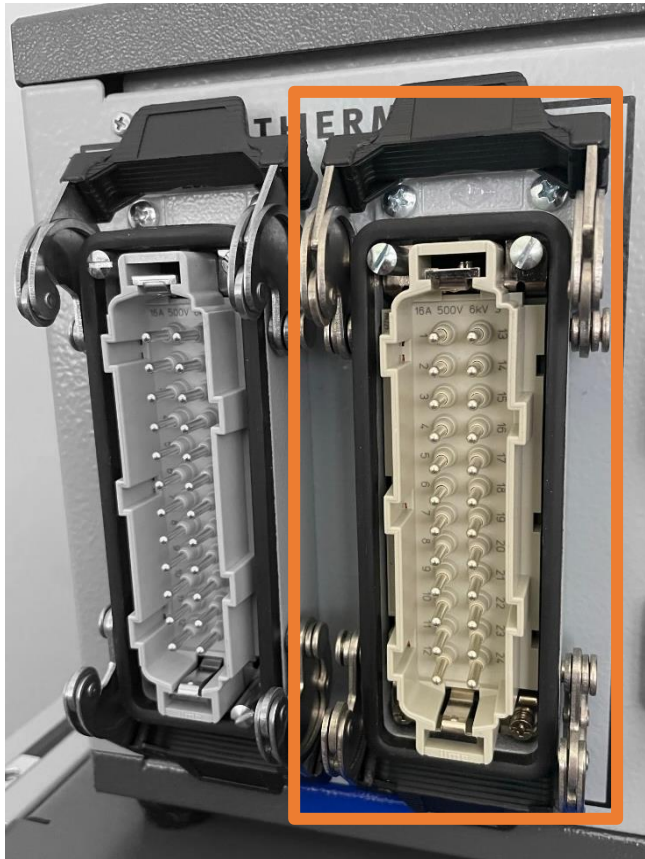


Wiring scheme	Pin	Designation	Zone
Günther Standard	1	+	13
	2	+	14
	3	+	15
	4	+	16
	5	+	17
	6	+	18
	7	+	19
	8	+	20
	9	+	21
	10	+	22
	11	+	23
	12	+	24
	13	-	13
	14	-	14
	15	-	15
	16	-	16
	17	-	17
	18	-	18
	19	-	19
	20	-	20
	21	-	21
	22	-	22
	23	-	23
	24	-	24
	PE		

On blueMaster pro 6 and 12 units, connector X2 is not assigned, on blueMaster pro 18 it is not fully assigned.

X3 - Load connector blueMaster pro

Part list	
Part	Item code
Housing 2 levers	152.267
Insert 24p F	308.0187.00
Coding pin	110.223

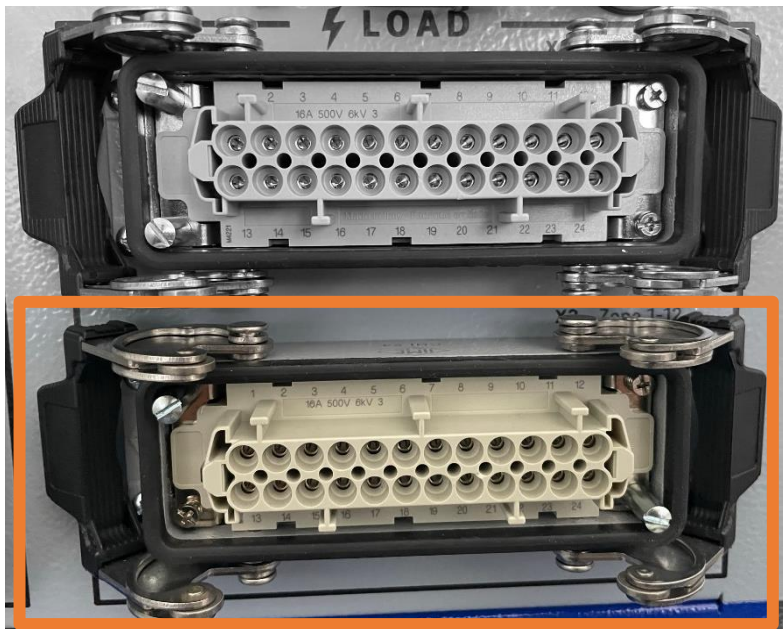

Wiring scheme		Pin	Designation	Zone
Günther Standard		1	L	1
		2	L	2
		3	L	3
		4	L	4
		5	L	5
		6	L	6
		7	L	7
		8	L	8
		9	L	9
		10	L	10
		11	L	11
		12	L	12
		13	N	1
		14	N	2
		15	N	3
		16	N	4
		17	N	5
		18	N	6
		19	N	7
		20	N	8
		21	N	9
		22	N	10
		23	N	11
		24	N	12
		PE		

On blueMaster pro 6 units, connector X3 is not fully assigned.

X4 - Load connector blueMaster pro

Part list	
Part	Item code
Housing 2 levers	152.267
Insert 24p F	308.0187.00
Coding pin	110.223



Wiring scheme		Pin	Designation	Zone
		1	L	13
		2	L	14
		3	L	15
		4	L	16
		5	L	17
		6	L	18
		7	L	19
		8	L	20
		9	L	21
		10	L	22
		11	L	23
		12	L	24
		13	N	13
		14	N	14
		15	N	15
		16	N	16
		17	N	17
		18	N	18
		19	N	19
		20	N	20
		21	N	21
		22	N	22
		23	N	23
		24	N	24
		PE		

On blueMaster pro 6 and 12 units, connector X4 is not assigned, on blueMaster pro 18 it is not fully assigned.